



Kanvazz

BY SLOTS®

HANGING INSTRUCTIONS


The surface must be clean, firm, smooth, dry, free from dust and grease and slightly absorbent. Highly absorbent surfaces should be pre-brushed with an impregnating agent. Always use professional equipment and sharp blades for the cutting equipment! Ambient t° must be at least 15°C (60°Fh) and use a white vinyl adhesive (ca. 5 kg for ca 30 m²).



Take the roll, **cut** the wall coverings and the tube at the distance between ceiling and floor + 2" (5cm). The actual cutting line becomes the upper side of the wall coverings. Always use sharp blades ! Put your **glue** onto the wall by means of a **paint roller** in vertical and horizontal direction.



Leave the adhesive for a few minutes if the surface is non-absorbent. This increases adhesion and prevents the adhesive from seeping through the product. Press the wall coverings onto the adhesive in an upper corner. Roll out approx. 3ft (1m) and position the roll at an angle to the wall.

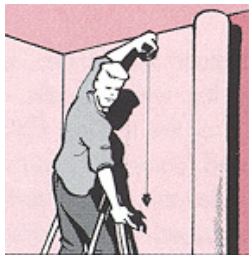


The **plumb line** will show whether the Jacquard pattern is straight. Use the plumb line again after each recessed or protruding corner.



Smooth out using a **clothes brush**. If you follow the instructions, no adhesive will seep through the product. Only use a spatula to press the product in the corners. Avoid pressing too hard, in order to prevent possible creases or wrinkles and to avoid optical side effects.



Cut away around windows and doors. Roll out the wall coverings across windows and doors. Then cut away the openings, leaving sufficient material for a neat finish around the frames. Save all left-overs, **do not fold them**, use them for an invisible finish in other places.

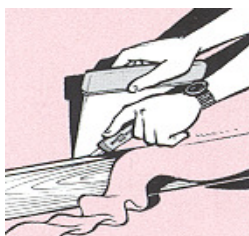


Using a spatula, press the textile to the wall and trim at the floor. Using a **sharp blade**, cut away all surpluses of fabric along the edge at the spatula. **Renew the blades regularly !**

HANGING INSTRUCTIONS



It is important to remove excess adhesive immediately using a clean, damp sponge. Treat any remaining 'wet' stains immediately with pure water, 'dry' stains can be removed (afterwards) by using our 'gomnet' stain-removing cloth.

Small airbubbles :

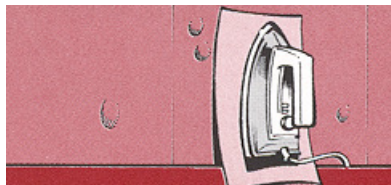

Small air bubbles can occur on a poorly prepared surface. Smooth these out using an iron **set to cotton**. Place a **clean sheet** between the iron and the wall coverings. If the wall covering does not stick, there is not enough adhesive.

Air pocket :

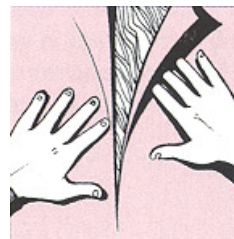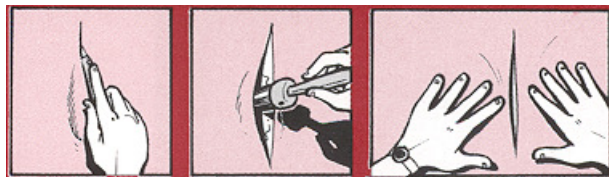

An air pocket may be formed if you do not press or smooth out the wall coverings sufficiently. Cut the air pocket vertically, apply the required adhesive carefully and fit together gently.

Any questions ?

- Mail us at: kanvazz@slots.be
- Call us at [+32 \(0\)56 77 48 50](tel:+322056774850)
- Visit our website at: www.kanvazz.be

Important information

Despite the rigorous final inspection, we nevertheless recommend checking the product for weaving faults or color deviations BEFORE the installation of the product. Once the product has been cut an/or used, complaints can no longer be accepted! Slight color variations and somewhat thicker or finer yarns compared to the sample in the pattern book may occur. Both effects are inherent in the production of textiles and furthermore emphasize the typical character of the product. This is no cause for complaints !

NEW Your Kanvazz is today even easier and faster to install thanks to the precut borders. In normal conditions, only trimming at the bottom is required. This results in an even faster installation than before and positively influences the final installationcost !

Enjoy your Kanvazz wall coverings every day !

